

SUSHI ROLL CUTTER (TK-2)

Instruction Manual



To use this machine safely and correctly,
please make sure to read this instruction
manual carefully before use.

Model/type	SUSHI ROLL CUTTER (TK-2)
dimension	W360×D410×H580(mm)
weight	17kg



Instruction for Safe Use.

These instructions explain the dangers of misuse of the Cutter.
To ensure optional performance, read these instructions carefully before use.

Misuse of Sushi Cutter can cause harm or death.

WARNING

Sushi Cutter are designed to be used for Maki Sushi.
Do not cut them for any other purpose.
Can cause damage and / or injury.



Prohibited

Do not use soft sponge or dishcloth when washing.
Would serious injury your hands / fingers.
Use only attached glove and brush for using.



Prohibited

Never touch the Blade with bare hands,
would serious injury your hands / fingers.



Prohibited

Do not dismantle or adapt the Sushi Cutter.
Can cause accident and / or Cutter breakdown.



Prohibited

Keep babies and children away from Cutter.
Can cause injury and / or accident.



Prohibited



CAUTION

Misuse of Sushi Cutter can cause damage to house or furniture and / or injury.

Remove Sushi Cutter connections to clean.
Can cause food poisoning if unclean.



Remove

Be sure to fit the Safety Cover to the body when using.
Can cause accident and / or Cutter breakdown.



Fit

When washing the cutter Blade, be sure to use the attached Brush.



Follow

Be sure to pull on attached glove with both hands when washing.
Can cause injury your hands / fingers.



Follow

Place on tough and smooth floor.
Unstable installation can cause the cutter to topple over resulting in injury.




Follow

Always use the cutter under the supervision of an operator.
Can cause injury and / or accident.




Understanding

Names of components.

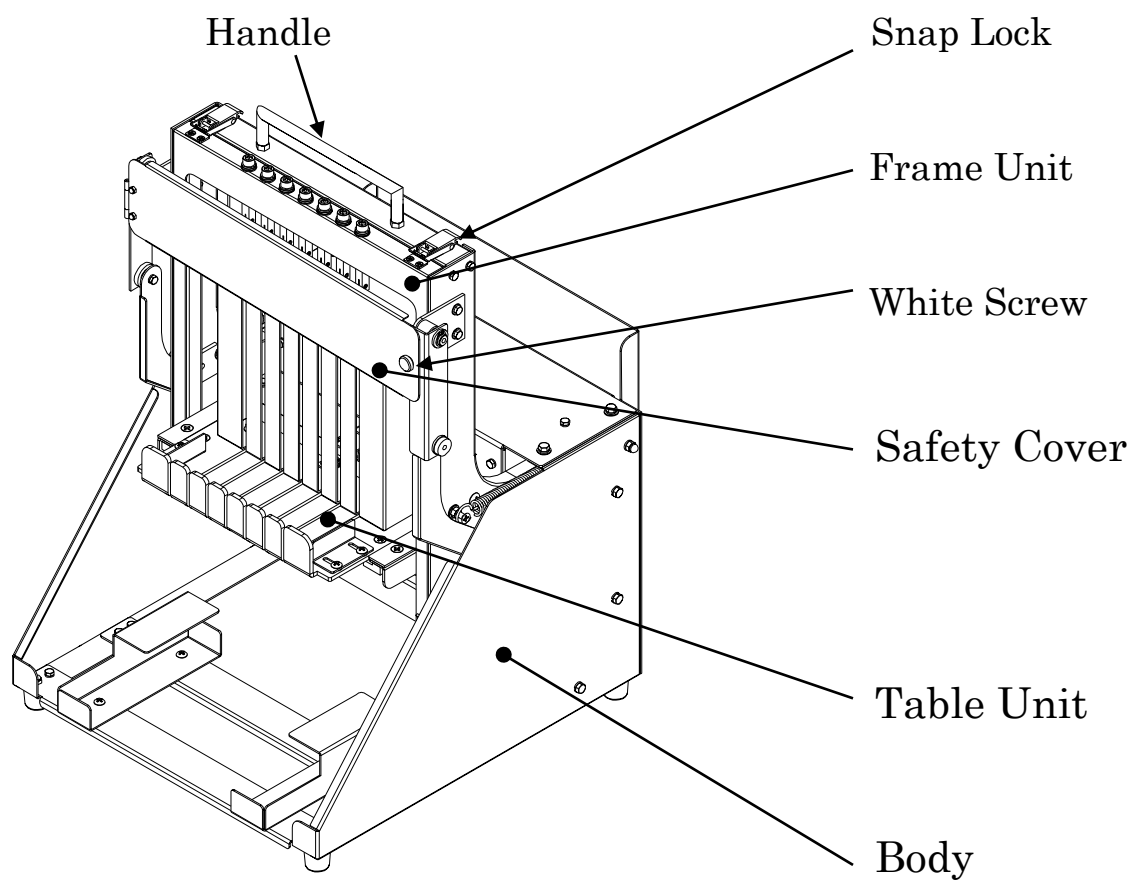


Unit

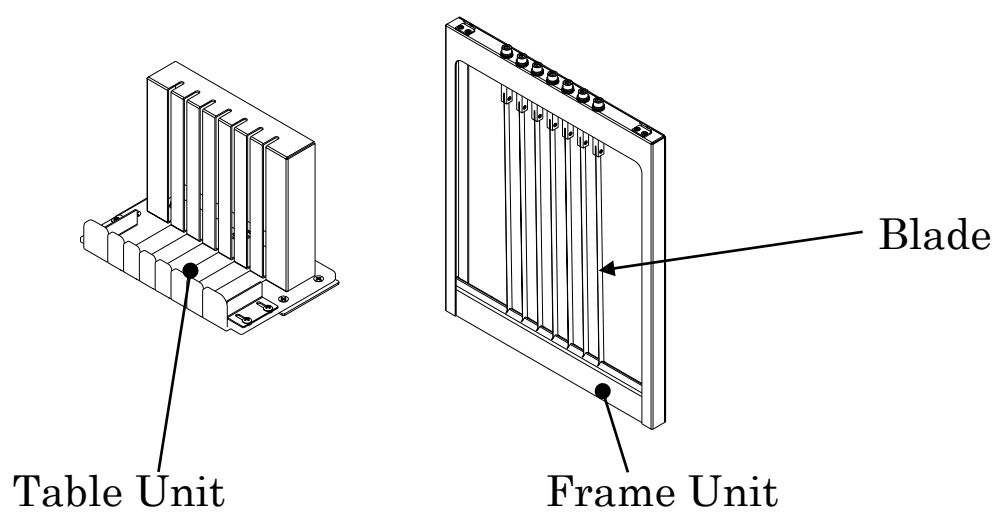


How to use the Sushi Cutter.




Be sure to fit Safety Cover to the body when using.

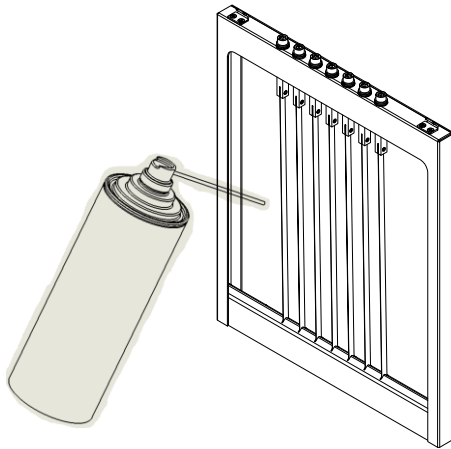


1. Spray the attached oil on the Blade.

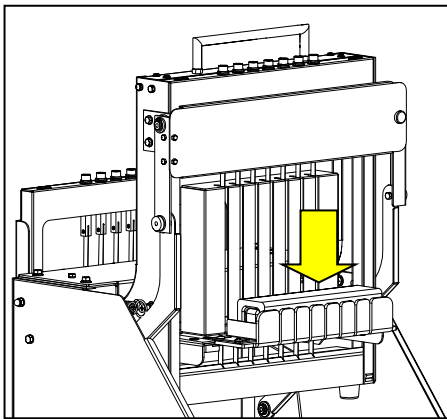

2. Check the Safety Cover close. Put the Maki Sushi on the Table unit.

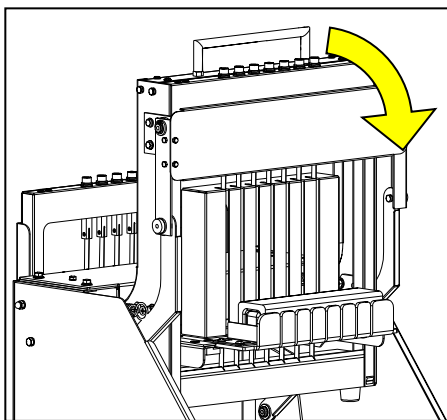


3. Hold the Handle with both hands tightly. Pull the Handle forward quickly.

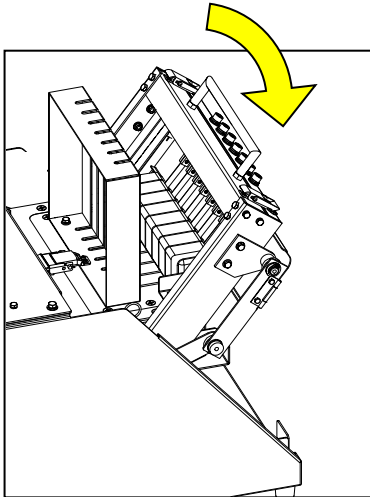

4. Pull it down.




Do not the Frame Unit halfway and down it slowly otherwise; cutting face irregular.

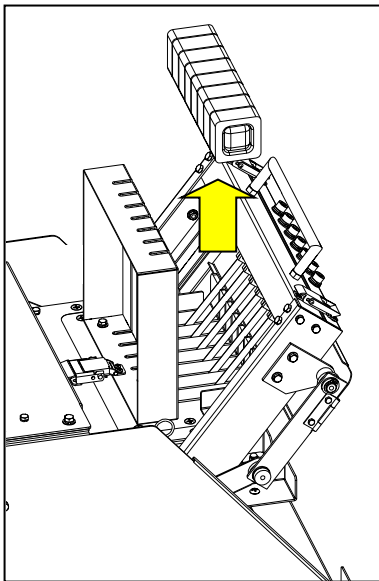


5. Take away Maki Sushi from on the Table Unit.



Be sure to take away Maki Sushi before return the Frame Unit.

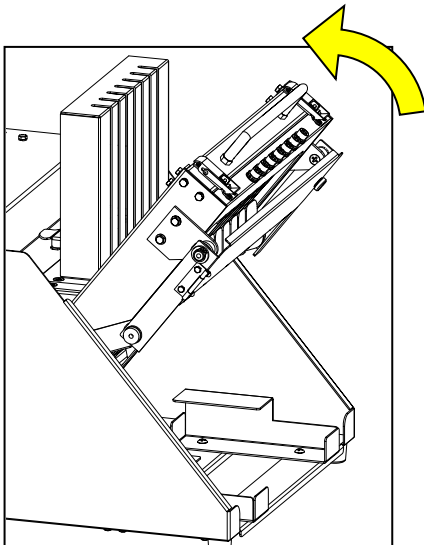

6. Hold the Handle with both hands.

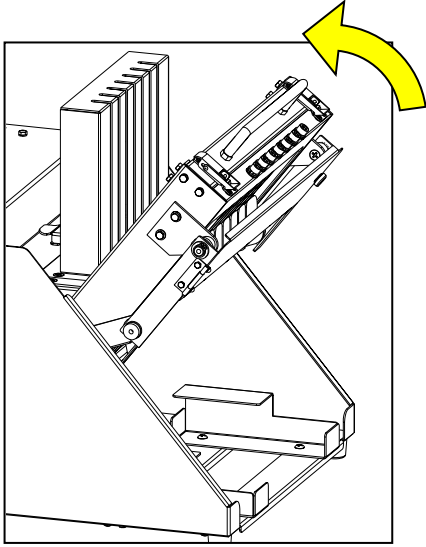


7. Return the Frame Unit to be correctly in position.

How to clean the Table Unit and Body.



Do not use the dishcloth or another sponge with bare hands; Otherwise your hands / fingers could cause injury.
Use only attached glove and brush for washing.

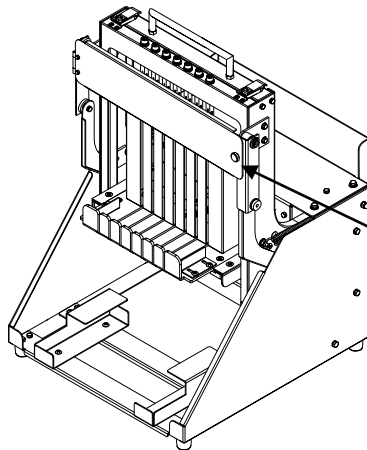


1. Turn the White Screw counterclockwise. Then, remove it.


White Screw



Be sure to pull on attached glove with both hands.

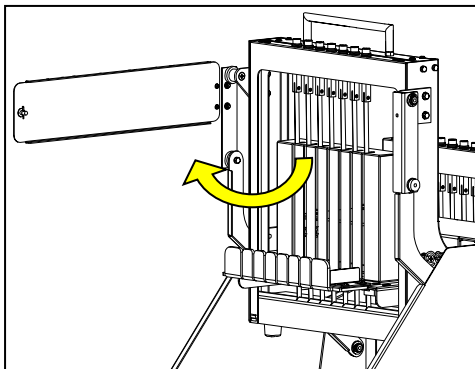

2. Pull the Safety Cover out to the front.

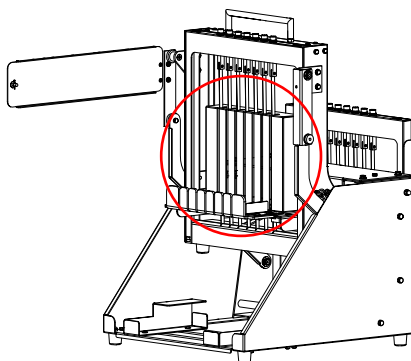


3. Wash the Table Unit.



Only use attached brush.

4. Wash the body.

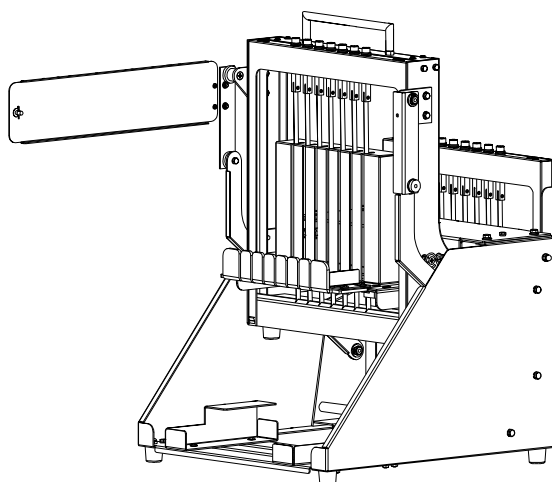


Use only attached brush.



When thoroughly clean,
soak the Body in cold or
lukewarm water.



Be sure to pull on attached glove
with both hands.

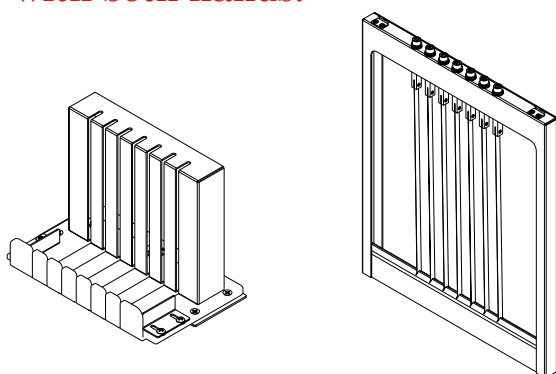

Be sure to remove the Frame Unit and Table Unit,
Before soak the Body in cold or lukewarm water.



Please see (How to remove the Unit) P.13~P.18.


How to clean the Frame Unit.



Do not use the dishcloth or another sponge with bare hands;
Otherwise your hands / fingers could cause injury.
Use only attached glove and brush for washing.



Do not wash Cutting side.
Do not touch the Blade with
bare hands; injury could result.

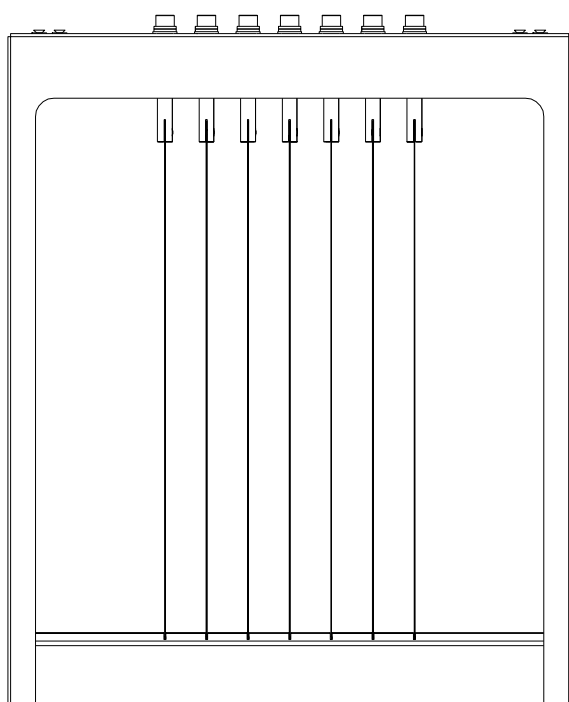

Wash the Frame Unit by
Detail Brush on reverse side.



Be sure to pull on attached
glove with both hands.



When thoroughly clean,
soak the Frame Unit in
cold or lukewarm water.



Be sure to pull on attached glove
with both hands.
Use only attached brush.



Do not put with Frame Unit in situations where
cutting side is facing upwards.




Please see (How to remove the Unit) P.13~P.18.

How to Remove the Unit.




Be sure to pull on attached glove with both hands.
Can cause injury your hands / fingers.

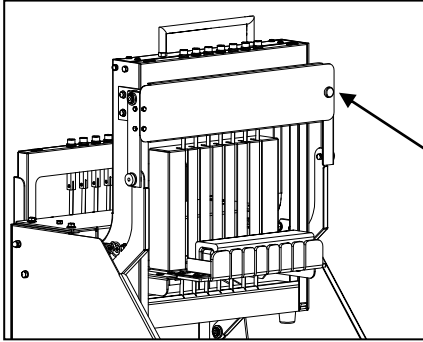


1. Turn the White Screw counterclockwise. Then remove it.


White Screw

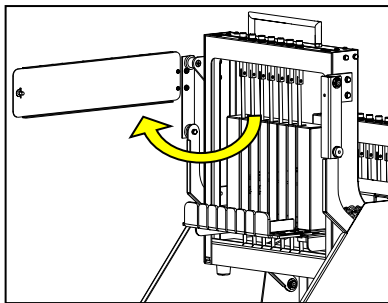


2. Pull the Safety Cover out to the front.

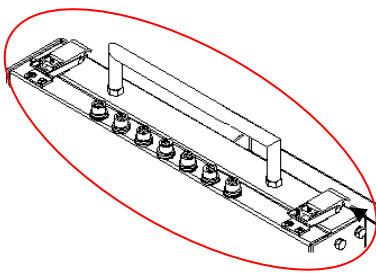

3. Hold the Frame Unit and body in one hand, and unlock the Snap Lock in the other.

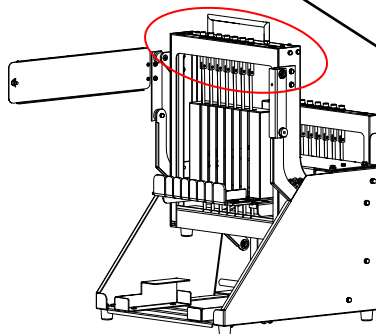

Snap Lock

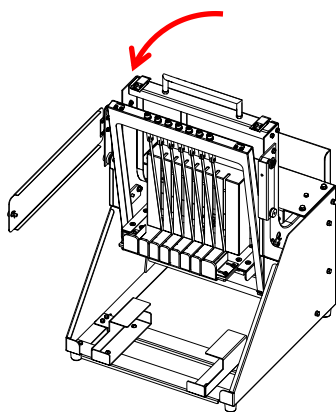

4. Hold the edge of Frame Unit tight with both hands.
Then, fall it down to the front slowly.




Do not hold the Frame Unit one-handed.

5. Pull up the Frame Unit.




Do not put with Frame Unit in any situations where cutting side is facing upwards.

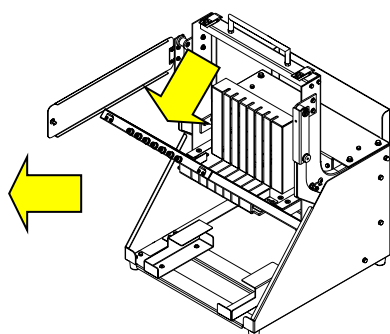

6. Unlock the back Snap Lock.

Snap Lock (Side of back)

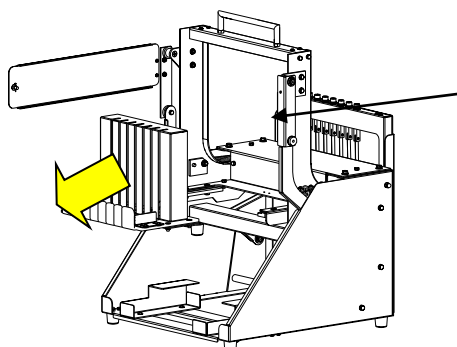


7. Pull the Table Unit out.

How to fit the Unit.




Be sure to pull on attached glove with both hands.
Can cause injury your hands / fingers.

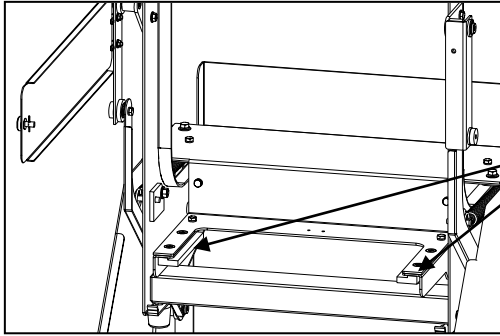


1. Insert the Table Unit into the groove.

Groove

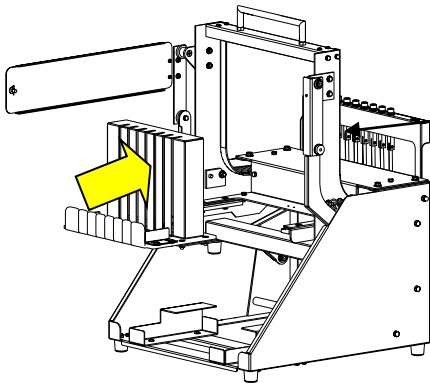

2. Lock the back Snap Lock.


Snap Lock (side of back)

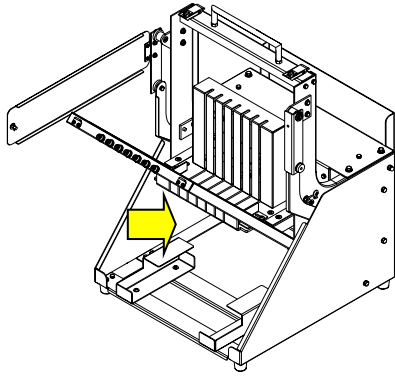

4. Hold the frame Unit tight with both hands.
Then, insert it into the Body.




Do not hold the Frame Unit one-handed.

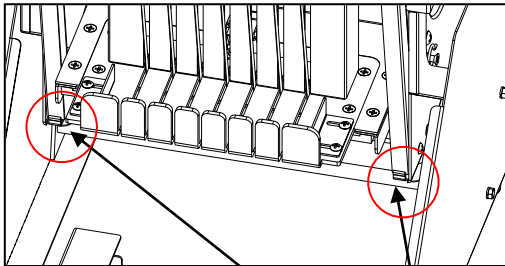


5. The Frame unit on the connecting position.
Then, fit it securely.

Connecting position

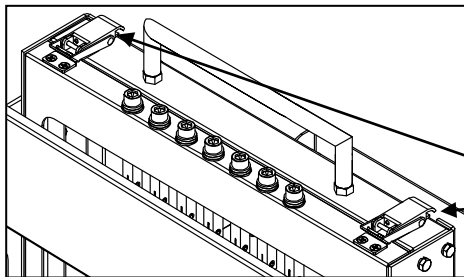


6. Hold the Flame Unit and body in one hand, and lock the Snap Lock in the other.

Snap Lock

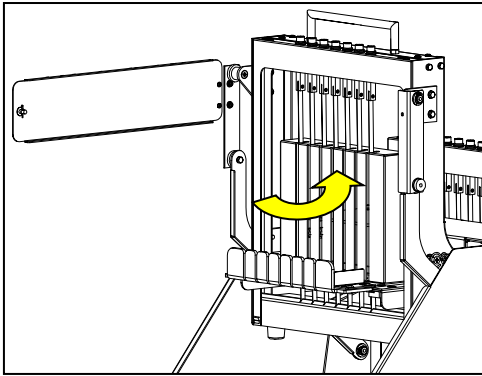

7. Close the Safety Cover.

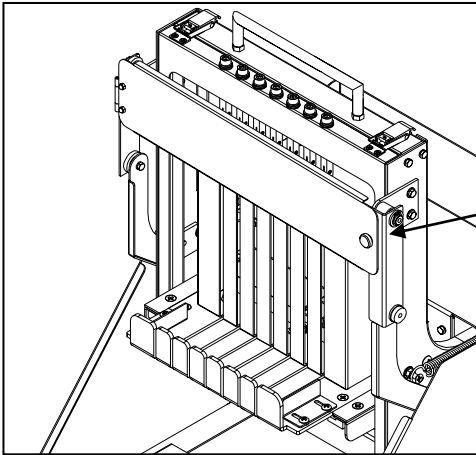

8. Turn the White Screw
clockwise.
Drive it securely.

White screw

How to change the Blade.




Do not touch the cutter Balde with bare hands; would serious injury your hands / fingers.
Be sure to pull on attached glove with both hands.




Do not put with Flame Unit in any situations where cutting side is facing upwards.



The Blades are extremely sharp.
Handle them with care to prevent personal injury.

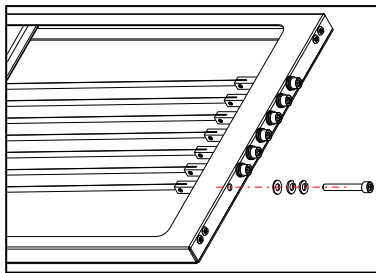




1. Put the Adjustable Wrench into the slot on the head of the screw.
Then, loosen the screw by turning the Adjustable Wrench counterclockwise.

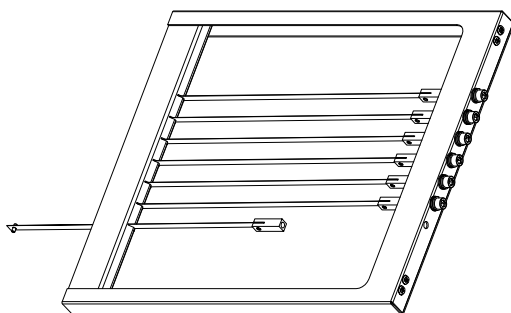

2. Take off the screw.

How to chan

3. Take off the Blade Pin,
then Blade come off.

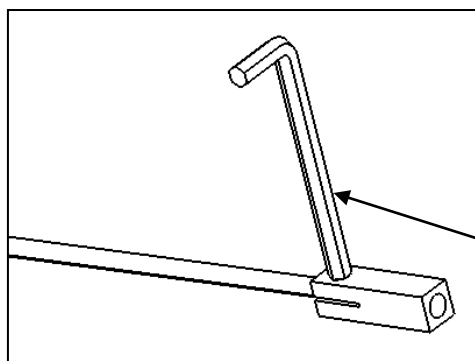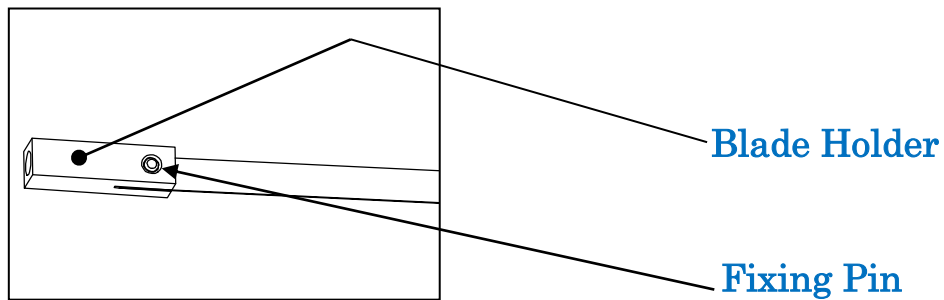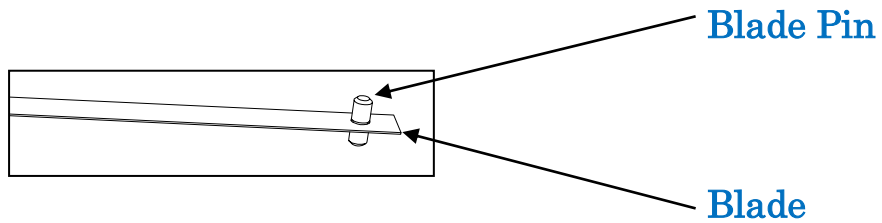

4. Push the Fixing Pin by
attached screwdriver, then
Blade come off.
Attach the new Blade.

* Do opposite way of remove when attach.