RICE MIXER MACHINE (TSM-S2)

Instruction Manual



To use this machine safely and correctly, please make sure to read this instruction manual carefully before use.

Model/type	RICE MIXER MACHINE / TSM-S2	
dimension	W570×D400×H450(mm)	
Power supply	AC100V - 240V 50-60Hz	
consumption	90W	
Electric current	AC100~120V 0.9A AC220~240V 0.5A	
Main body weight	34kg	



 
©For the sake of safety, read the following carefully and make sure to follow the instructions:

This explains the degree of risk in the case of improper handling, classified into ⚠ WARNING and ⚠ CAUTION.

The symbols have the following meanings:








Warning: Improper handling may result in death or severe injury.

Do not pull the cord when unplugging the	When you do not use the machine for
power supply plug.	a long time, make sure to unplug the
●It may break, causing a fire.	power supply plug.
Prohibited	Olt may result in an electric shock, an electric leakage or a fire
Do not damage the power supply cord.	Remove all the removable parts from the main
Twisting, putting something on it,	body and clean them.
or inserting something in it may break it,	●It may cause an injury or an accident.
causing an electric shock or a fire.	Removal
Do not damage	
Do not use a damaged cord or	Do not splash water on the main body
an outlet with a loose plug insert.	other than removable parts.
It may cause an electric	Olt may cause an electric shock,
shock, short circuit or fire.	a short circuit or fire.
Avoid installing in any moist or water-logged	Do not insert your hand or fingers
locations.	into the hopper while operating.
●It may cause an electric shock, short	●Your hand or fingers may become Prohibited
circuit or fire.	caught causing an injury or an accident.
Installation prohibited	
Grounding	Do not insert your hand into each roller portion
Otherwise, it may cause an electric	during operation.
shock or an accident.	●Your hand or fingers may
	become caught, causing
Grounding	an injury or an accident.
	<u> </u>

Do not disassemble or alter the machine.	Do not insert your hand or fingers
●It may cause an electric shock,	into any rotating portion during operation.
fire or an injury.	●Your hand or fingers may
No dia a a a subb	become caught,causing
No disassembly	an injury or an accident.
Insert the power supply plug firmly into the	Remove or mount the parts after turning OFF
base after removing dust.	the power supply.
●It may cause fire or a fire.	●Your hand or fingers may become
Remove dust	caught,causing an injury or an accident. Turn OFF the power supply
As soon as you notice any gas leakage, open	Prevent babies and children from touching it.
your windows without touching the main	It may cause an injury or an accident.
body or the power supply plug.	
• A spark from electric contact may	
cause an explosion or fire.	Do not touch
Under any abnormal conditions such as a	Do not put anything other than rice or Rice into
burnt smell, immediately unplug the power	the hopper.
supply plug and suspend operation.	●It may cause an injury or an accident.
Continuous operation under	\bigcirc
abnormal conditions may cause Unplug	Prohibited
an electric shock or a fire.	



Caution: Improper handling may result in death or severe injury.

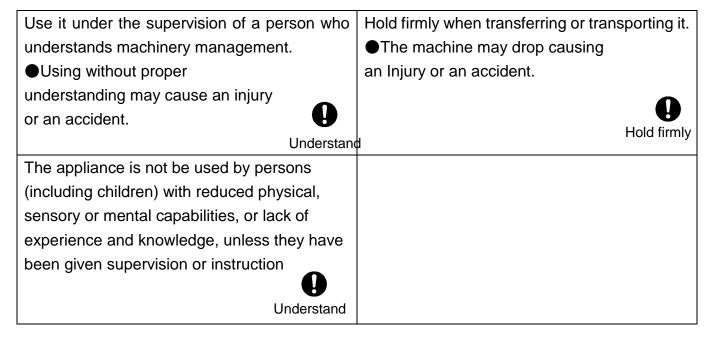





or damage to buildings and household effects.

Do not wash the Teflon coated machine parts	Do not damage parts.
with a hard brush or hard sponge.	●It may prevent the normal
●It may cause peeling of the Teflon coating. Prohibite	Assembly of parts and cause problems. Prohibited
Wipe off any oil or fat sprayed	Install the machine at a solid and flat location
on the machine main body other	■A fall of the machine may
than the removable parts.	damage the machine itself or the
●It may result in deterioration or	building or cause an injury or
the breakage of parts.	an accident. Install horizontally
Do not wash the removed resin or plastic	Firmly hold when transferring or transporting
parts	the machine.
in a dishwasher or in hot water.	●A fall of the machine may
●It may deform or damage the parts. Prohibited	damage the machine itself or the building.

Warning Label

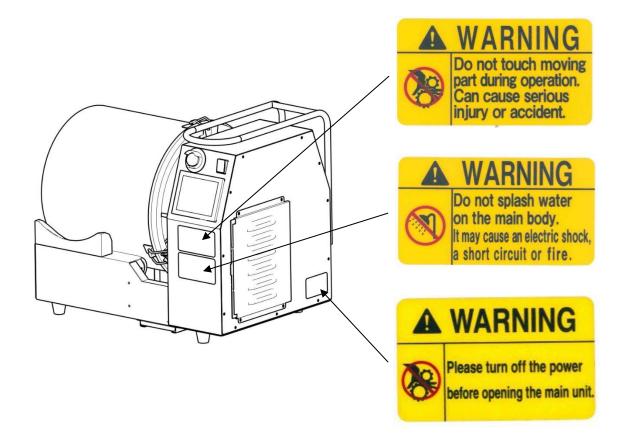

Product Label

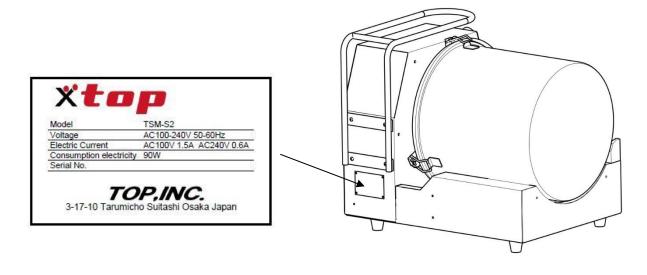


Back Side

Power Cord




For safety reason, only the attached power cable can be applied for this product. It may cause an electric shock, short circuit or fire.


For 100-120V Use

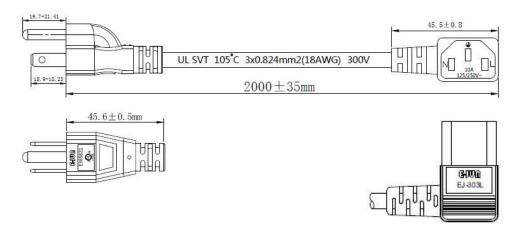

For 220-240V Use

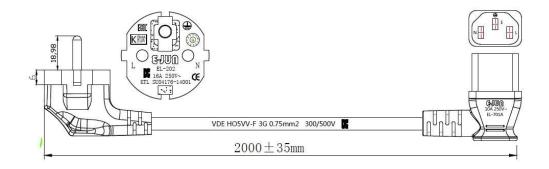

Power Cord Setting

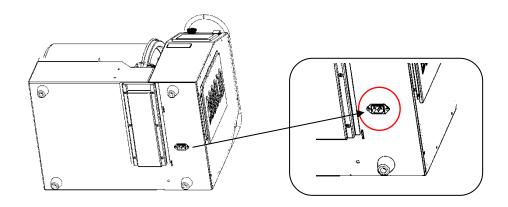

Set the power code to the inlet of main body.


For safety, set the power code to the inlet correctly and certainly.




Do not touch the power code with wet hands.

It may cause the electric shock or electric troubles.

Tank Cover Rack Setting

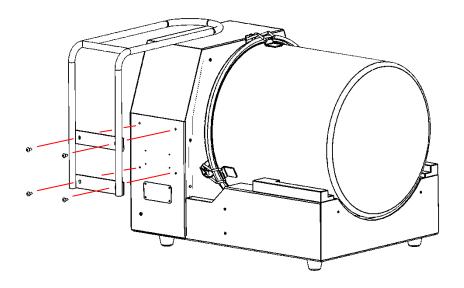


Fighten the screws for setting the Pipe Rack on the main body.

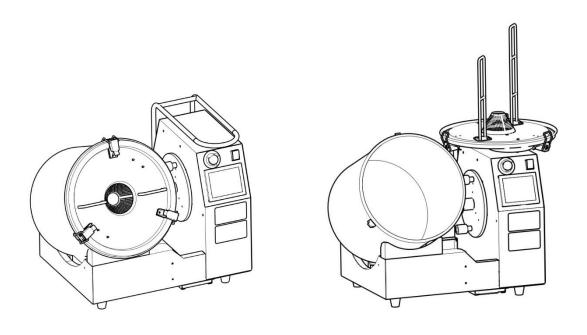



Pipe rack is only used for resting the tank cover. It may cause an injury or an accident.

Main Parts Name

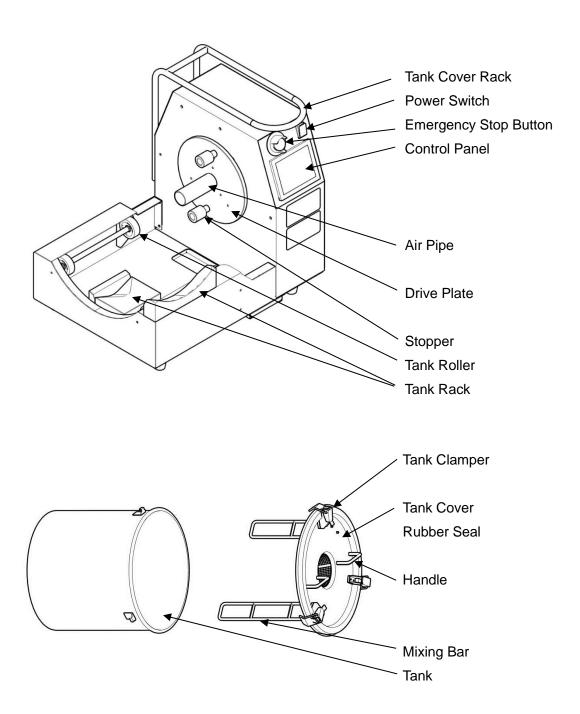


Control Panel - 1 / Drive



Do not insert your hand or fingers into any rotating portion during operation.

Your hand or fingers may become caught, causing an injury or an accident.

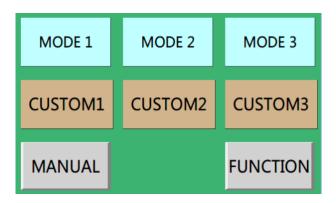

- 1. Select and press MODE
 - * refer the startup screen above photo.




2. Press START

Tank runs and starts.


Press CANCEL if you want to stop and move back to startup screen.



- 3. When the program is completed, the alarm rings.
 - Press FINISH
 - * Alarm will ring until you press FINISH.

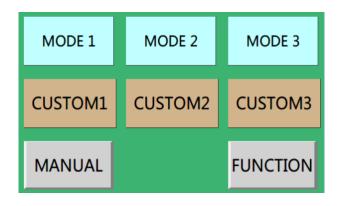

1. Press CUSTOM to change.

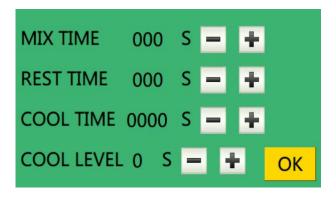



4. Press START

Tank runs and starts.

Press CANCEL if you want to stop and move back to startup screen.



2. Press SET.

3. Change the time length by \square +.

MIX TIME

Time for mixing rice and vinegar in the tank rotation.

REST TIME

Time for marinating vinegar in to rice in the tank.

COOL TIME

Time for cooling rice in the tank by wind.

COOL LEVEL

The strength of wind.

After you set your own program, press OK.

%The edited program will be memorized.




5. Press PAUSE If you want machine to pause.


CControd Flamee | -34 /-C.H.A.g.eNLadguage



Do not insert your hand or fingers into any rotating portion during operation. Your hand or fingers may become caught, causing an injury or an accident.

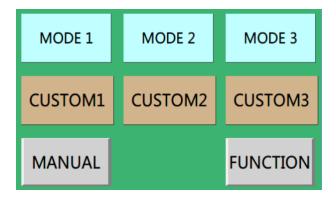

1. Press MANUAL

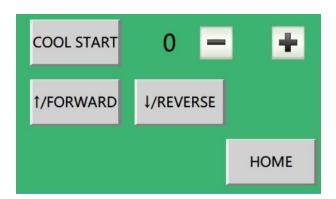


2. Pressing COOL START, cold wind comes out continuously.

Pressing COOL START, once cold wind stops.


Pressing \uparrow /FORWARD , tank will rotate left while pressing this button.

Pressing \(\frac{1}{KEVERSE} \), tank will rotate right while pressing this button.


Pressing HOME, you can move back to startup screen.

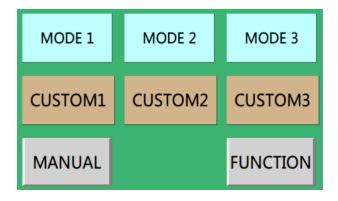

1. Pressing FUNCTION

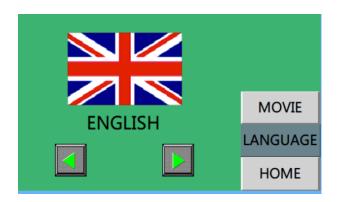

2. Select the language by pressing \leftarrow Press HOME to move back to startup screen. Release the Emergency button

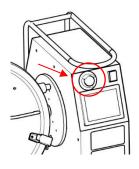

Emergency Stop Button is switched on.

Switch off the Emergency Stop Button when you start operating the machine.

Control Panel - 6 / Connect the earth



Earthing


Otherwise, it may cause an electric shock or an accident.




The earth cable is not connected.

Please connect earth cable for the safety.

 $\label{eq:press} \begin{picture}(2000)\put(0,0){\line(1,0){100}} \put(0,0){\line(1,0){100}} \put(0,0$

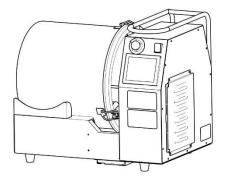

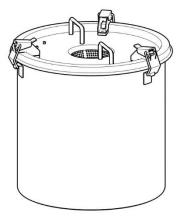









2. Unlock the 3 Tank Clampers and remove the Tank Cover.

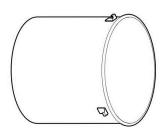

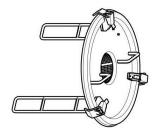

Please use and wash by soft sponge when you wash Tank, Tank Cover and Mixing Bar.



Hold the parts firmly and remove the tank.

Parts may drop causing an Injury or an accident.





Do not splash water on the main body other than removable parts.

It may cause an electric shock,



Do not wash the Teflon coated machine parts with a hard brush or hard sponge. It may cause peeling of the Teflon coating.

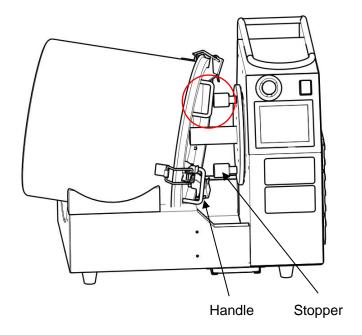


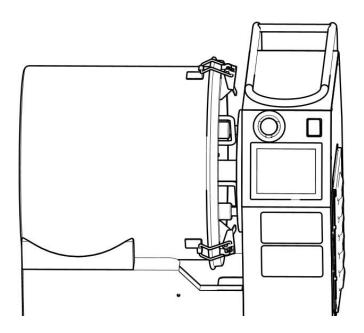

Set the Tank back until the handle and stopper get touched.




Do not insert your hand or fingers into any rotating portion during operation. Your hand or fingers may become caught, causing an injury or an accident.

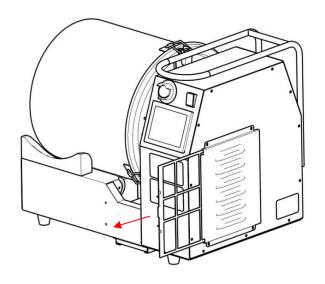

Remove the filter from main body.


Remove the filter and wash it once a week.


Dust tray

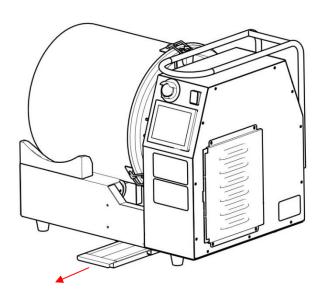


Remove the dust tray from main body.

Remove the dust tray and wash it every day.

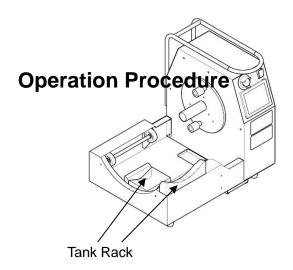


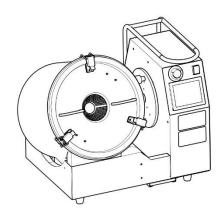


1. Set the tank on the tank rack.

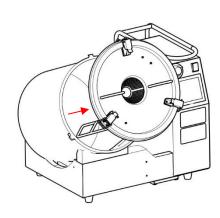

2. Remove the tank cover from the tank.

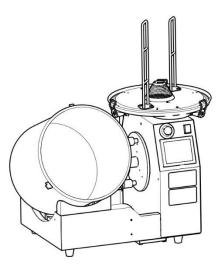

3. Set the tank cover on the tank cover rack

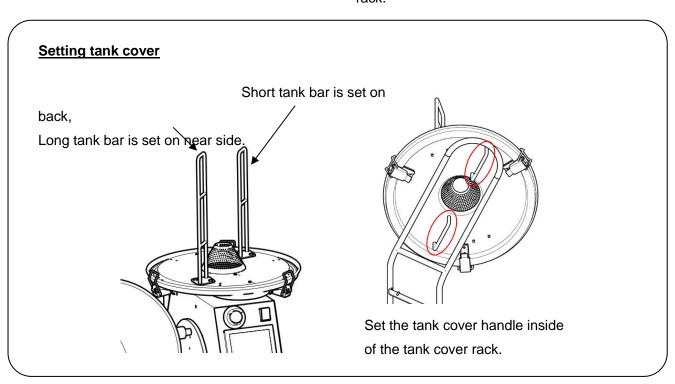



Do not insert your hand or fingers into any rotating portion during operation. Your hand or fingers may become caught, causing an injury or an accident.

- 1. Spray the inside of Tank, Tank Cover and Tank Bar.
- 2. Put the rice in the Tank.
 - *Capacity: Cooked Rice Max 6kg.
- 3. Put and spread the vinegar on the rice in the Tank.
- 4. Set the Tank Cover on the Tank.
- 5. Set the Tank on the main body.
- 6. Switch on POWER SWITCH
- 7. Select and Press MODE or CUSTOM
- 8. Press START
 - *when the program is completed, the alarm rings. Press FINISH
- 9. Press FINISH
 - * Alarm will ring until you press FINISH.
- 10. Remove the tank from the body and set on the tank rack.
- 11. Remove the tank cover from the tank and set on the tank cover rack.
- 12. Remove the sushi rice from the tank.